

Figure 3-4. Pointing and Tracking Scope Configuration

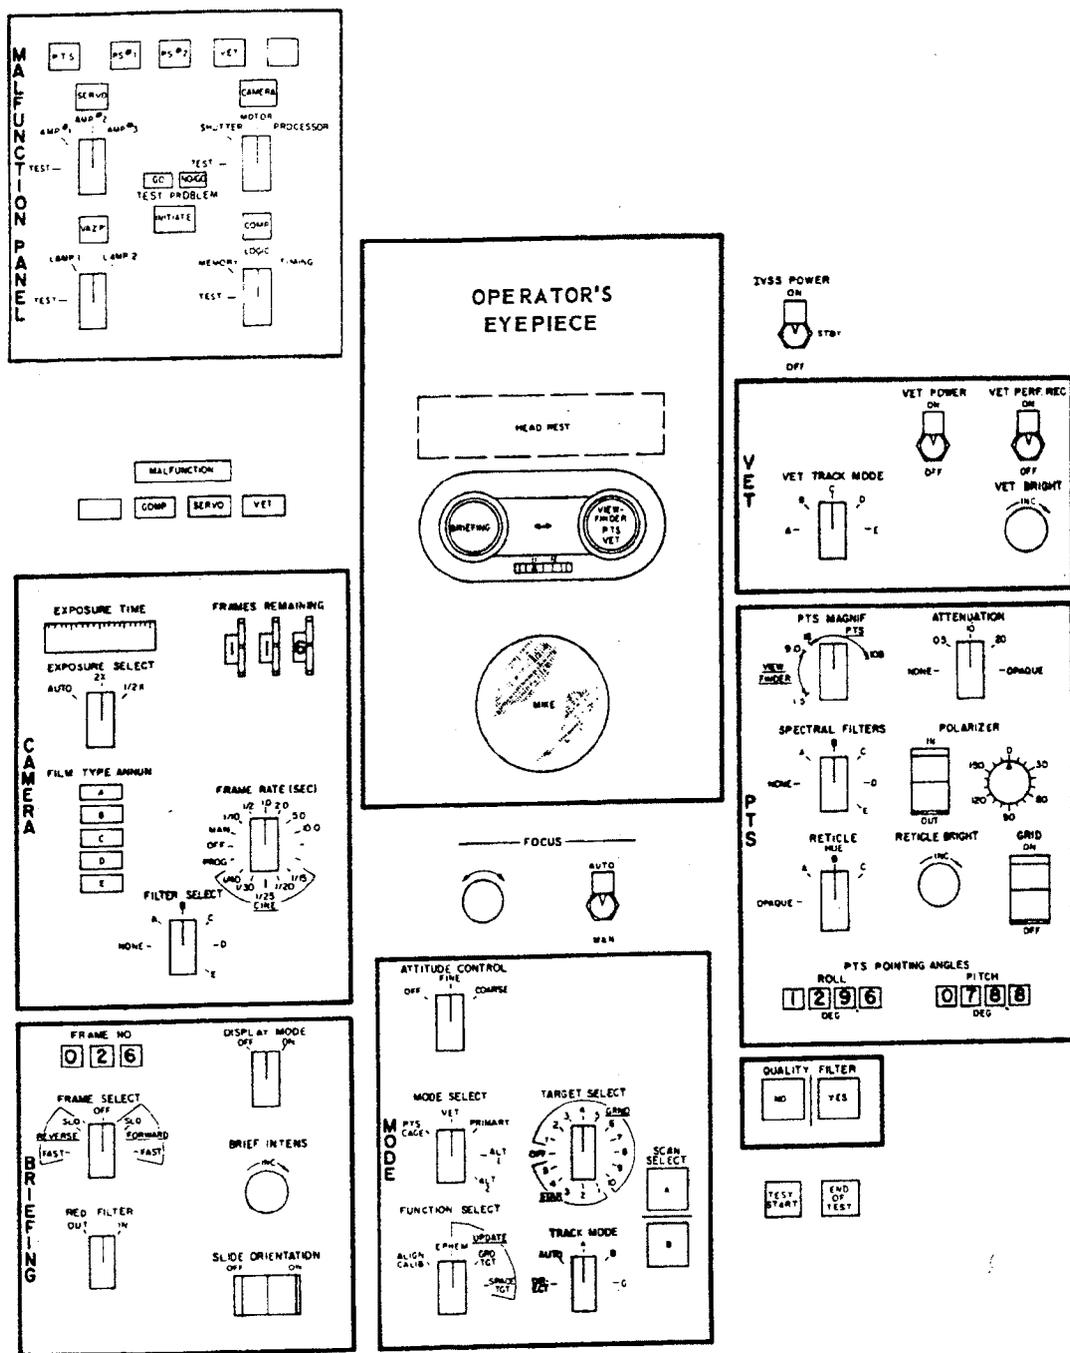


Figure 3-6. IVSS Control Panel